

Instructions for Tuning your receiver to the Optus D2 Satellite

Superjack

Before you begin identify the following buttons on the remote control for the satellite receiver:- **Menu, exit, OK, the up-down and left-right buttons, and the red, green, yellow and blue buttons.**

Switch on the satellite receiver and TV as you normally would to watch one of the channels:- now you are ready to begin:-

Note:- When you 'select' an item on the on-screen menu it will be a different colour to the other items

To scan in the channels:-

1. Press the **menu button** and use the left or right buttons to highlight the 4th box from the left (Installation)
2. Select **Channel Search** with the **up** or **down** button and press **OK**
3. Press **down** button to highlight **Transponder**
4. Press the **red** button
5. Press the **down** button to highlight **Frequency** and type in "12706"
6. Press the **down** button to highlight **Symbol Rate** and type in "22500"
7. Press the **down** button to highlight **Polarization** and the **left or right** button to select **VER**
8. Press the **Down** button to highlight **Search mode**
9. Press the **Left or Right** button to select **FTA**
10. Press the **Down** Button to highlight **Search 1 Sat**
11. Press the **Left or Right** button to select **Search Network**
12. Press **OK**
13. When the search is completed press **OK**

To organize the channels:-

1. Press the **menu button** and use the left or right buttons to highlight the first box on the left - **Channel Manager**
2. Select **TV Channel** with the **up** or **down** buttons and press **OK**
3. Use the **up** or **down** buttons to select the channel you wish to move
4. Press the **yellow** button and press **OK**
5. Press the **up** or **down** buttons to move the channel to where you want it and press **OK**
6. Repeat steps 3 and 5 for each channel you want to move.
7. When completed press the **exit** button twice

If you have another brand of satellite receiver, these are the new parameters for Optus D2 that will need to be entered in to your satellite receiver.

Freq 12,706 GHz
Symbol rate 22,500
Pol Vertical
FEC $\frac{3}{4}$
Network: Enable